


Add a Seam Allowance

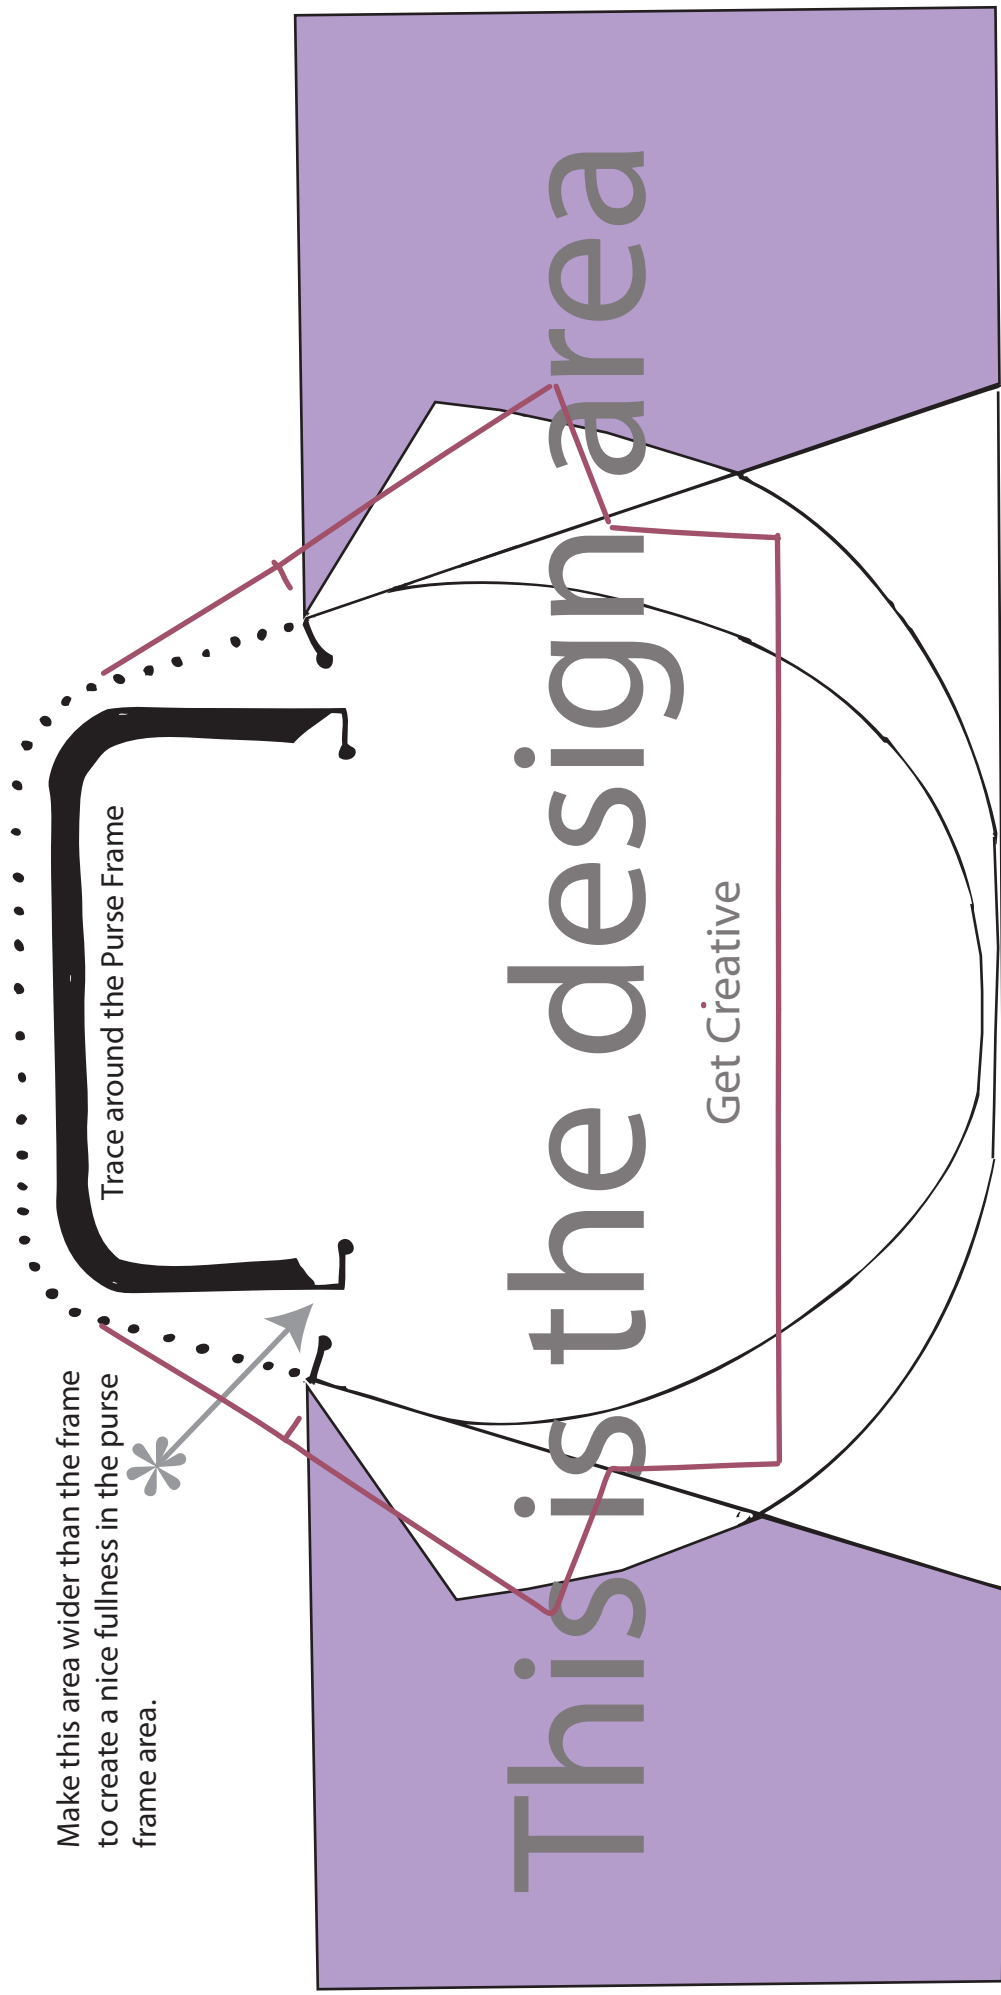

Make this area wider than the frame to create a nice fullness in the purse frame area.

Trace around the Purse Frame

Get Creative

This is the design area

Key

— This is the outline of the purse pattern provided.